




2.4G Wireless Remote Control Manual

(ONLY COMPATIBLE WITH SL6015D-MCT)

REMOTE CONTROL FUNCTIONS:

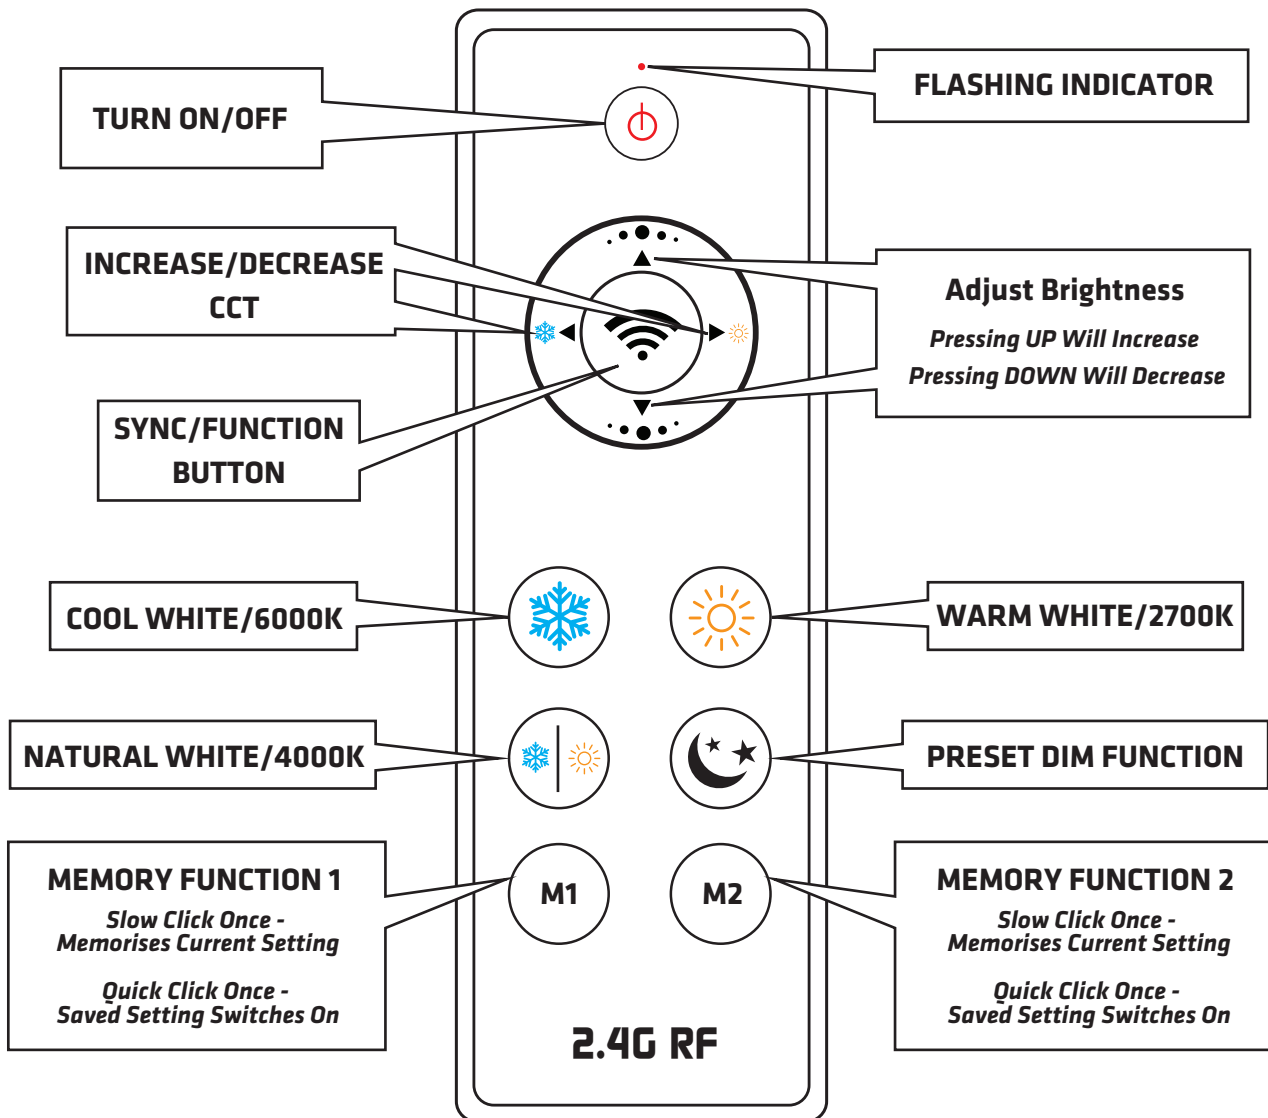

SPECIFICATION:

PCB Board No.	V1.0
Transmission Frequency	2400-2483.5MHz
Standby Consumption	3uA
Working Voltage	12mA
Control Distance	20-30 Metres
Modulation	GFSK
Transmission Power	10dB
Battery	Button Battery

BATTERY :

PLEASE ENSURE THE BATTERY IS PLACED CORRECTLY WITHIN THE REMOTE CONTROL. UPON PLACING THE BATTERY, PRESS ANY BUTTON & VIEW THE INDICATOR TO CONFIRM REMOTE IS WORKING

PLEASE NOTE: UPON FIRST USE, THE FITTING & THE REMOTE SHOULD ALREADY BE IN SYNC.

HOW TO MATCH/SYNC THE LIGHT FITTING WITH THE REMOTE:

CODE MATCH/SYNC:

STEP 1: SWITCH THE LAMP ON FROM THE WALL SWITCH & SIMULTANEOUSLY **PRESS DOWN THE SYNC/ FUNCTION BUTTON () WITHIN 5 SECONDS OF SWITCHING THE LAMP ON FROM THE WALL SWITCH.**

STEP 2: IF STEP 1 IS FOLLOWED CORRECTLY, THE LAMP WILL SLOW FLASH 3 TIMES TO CONFIRM SYNC IS COMPLETE

PLEASE NOTE: THIS PROCESS CAN TAKE A FEW ATTEMPTS, AS IT HAS TO BE DONE SIMULTANEOUSLY

CODE CLEARING/DE-SYNC:

STEP 1: SWITCH THE LAMP ON FROM THE WALL SWITCH & SIMULTANEOUSLY **CLICK THE SYNC/FUNCTION BUTTON () 5 TIMES WITHIN A 5 SECOND PERIOD.**

STEP 2: IF STEP 1 IS FOLLOWED CORRECTLY, THE LAMP WILL SLOW FLASH 6 TIMES TO CONFIRM CLEARING/DE-SYNCING

PLEASE NOTE: THIS PROCESS CAN TAKE A FEW ATTEMPTS, AS IT HAS TO BE DONE SIMULTANEOUSLY

GROUPING MULTIPLE LAMP FITTINGS:

ONE REMOTE CAN CONTROL UP TO 20 LIGHT FITTINGS AT THE SAME TIME. IF YOU WISH TO HAVE MULTIPLE LIGHT FITTINGS ON ONE REMOTE PLEASE FOLLOW THE INSTRUCTIONS BELOW. EACH LAMP WOULD HAVE TO BE PROGRAMMED SEPERATELY

STEP 1: SWITCH OFF ALL FITTINGS FROM THE WALL SWITCH


STEP 2: SWITCH ON 1st FITTING TO BE SYNCED & FOLLOW CODE MATCH/SYNC INSTRUCTIONS (ABOVE)

STEP 3: ONCE THE FITTING SLOW FLASHES 3 TIMES, SWITCH IT OFF FROM THE WALL SWITCH.

STEP 4: ALL FITTINGS MUST BE SYNCED INDIVIDUALLY.

STEP 5: REPEAT STEP 1, 2 & 3 UNTIL ALL FITTINGS ARE SYNCED

FOR MORE INFORMATION, PLEASE CALL US ON 01254 695914

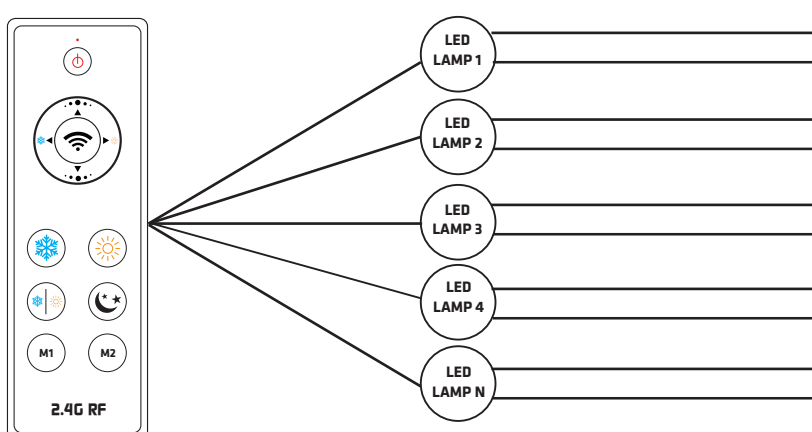

1. Make sure all fittings are switched off.
2. Sync each fitting individually to the remote you wish
3. Switch off the first synced lamp in order to sync the second lamp
4. sync upto 20 fittings on one remote

ONE REMOTE CAN CONTROL UPTO 20 FITTINGS

PLEASE NOTE: SYNCING WILL NOT WORK IF MULTIPLE FITTINGS ARE ON AT THE SAME TIME, ALL FITTINGS MUST BE SYNCED INDIVIDUALLY - EVEN IF SYNCING TO THE SAME REMOTE